


## Call Button First Time Setup Guide

**CONGRATULATIONS** on your new Call Button System! We are here to help you get your new system set-up quickly & easily. Please follow the steps below and you will be ready to use your new system in less than 15 minutes!

- **Step 1:** Plug the hub into ethernet and power.
- **Step 2:** If you have a walkie-talkie module:
  - Plug the USB into one of the hub ports
  - Plug the 3.5mm cable into the hub aux port
  - Setup the antenna at least 2 feet away from the hub and walkie module
  - Plug in the 12v power supply

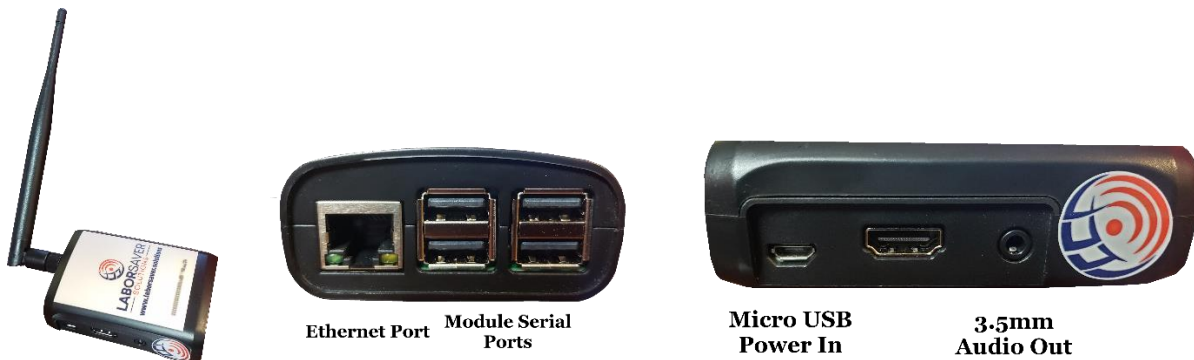

- **Step 3:** Log into [my.laborsaver.solutions](http://my.laborsaver.solutions) and create a new business if not already created.
- **Step 4:** On the side menu, click Paging System, Setup. Once prompted, enter in the hub id located on the top of the hub unit.
- **Step 5:** According to the numbered labels on the back of each button, create a new button in the setup page assigning it the parameters you need with the labeled id.

**Your Buttons**


[Add Button](#) [Save](#)

Audio Settings

Volume(%):  Voice:  Speaking Rate:

|  |  |  |
|--|--|--|
| <p>Name <input type="text" value="Women's Bathroom"/></p> <p>ID <input type="text" value="1"/> <input checked="" type="checkbox"/> Include Data</p> <p>Audio Text</p> <p><input type="text" value="An attendant, is needed to the Women's Bath"/></p> <p>Delay Cycle</p> <p><input type="text" value="30-20-15-10"/></p> <p>Audio Channel <input type="text" value="1"/></p> <p><a href="#">Delete</a></p> | <p>Name <input type="text" value="Family Track"/></p> <p>ID <input type="text" value="2"/> <input checked="" type="checkbox"/> Include Data</p> <p>Audio Text</p> <p><input type="text" value="An Attendant, is needed to the Family Track"/></p> <p>Delay Cycle</p> <p><input type="text" value="30-20-15-10"/></p> <p>Audio Channel <input type="text" value="1"/></p> <p><a href="#">Delete</a></p> | <p>Name <input type="text" value="Junior Track"/></p> <p>ID <input type="text" value="3"/> <input checked="" type="checkbox"/> Include Data</p> <p>Audio Text</p> <p><input type="text" value="An attendant, is needed to the Junior Track"/></p> <p>Delay Cycle</p> <p><input type="text" value="30-20-15-10"/></p> <p>Audio Channel <input type="text" value="1"/></p> <p><a href="#">Delete</a></p> |
|--|--|--|

- **Step 6:** Click save and wait approximately 90 seconds for your hub to update, then press one of your buttons to ensure the audio message is correct.
- **Step 7:** To sign up for email reports, click Paging System, Emails and enter in your information. Individual reports give you info on a per button basis. Multi reports gives an overview on a per business basis.

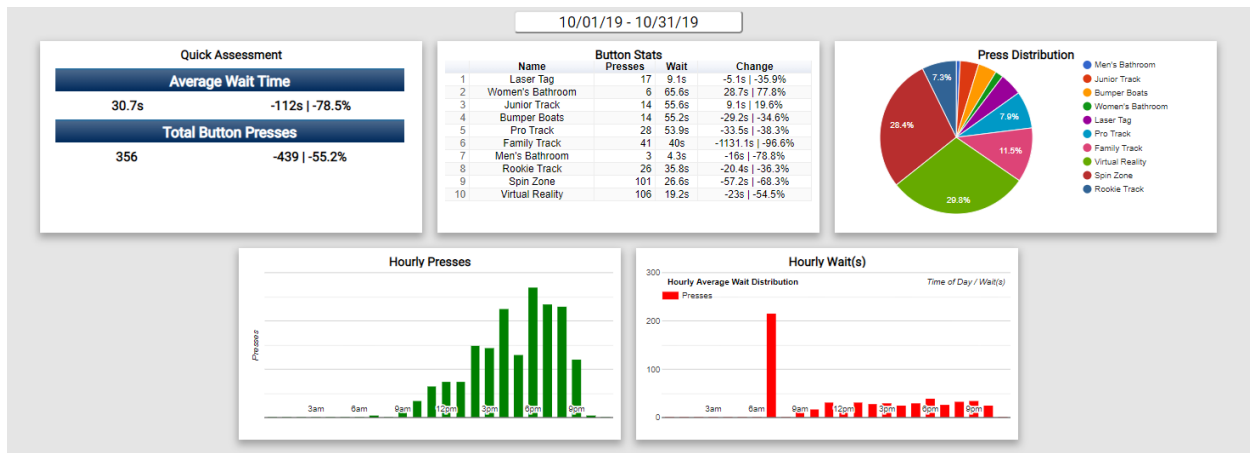

If you need additional support setting up your system, please contact Labor Saver Solutions at [support@laborsaver.solutions](mailto:support@laborsaver.solutions) or by calling (888) 401-3811.